

beyerdynamic

MMX 200 wireless

GAMING HEADSET

Demontageanleitung zur Akkuentnahme

— NUR FÜR FACHPERSONAL —

1. Introduction.....	3
2. Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU	3
3. Disposal of batteries	3
4. Removing the battery	3

1. Introduction

In accordance with the Electrical and Electronic Equipment Act (ElektroG) and the European WEEE Directive 2012/19/EU, electrical and electronic equipment must be disposed of separately from household waste at the end of their life.

If the device is operated with batteries, these must be removed from the device before disposal. If batteries are permanently installed in the device, they must be removed by professional staff for safety reasons.

These disassembly instructions show how to proceed.

2. Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU



- ▶ The symbol of the crossed-out dustbin on the product, in the operating instructions or on the packaging means that electrical and electronic devices must be disposed of separately from household waste at the end of their life cycle.
- ▶ Always dispose of used equipment in accordance with applicable regulations.
- ▶ For the return of old equipment, batteries and rechargeable batteries, there are free collection points or a free return to beyerdynamic, as well as other acceptance points for reuse. The addresses are available at the local city or municipal administration.
- ▶ Dealers for electronic equipment are generally obliged to take back waste electrical/electronic equipment free of charge. This obligation also applies to sales via remote communication.
- ▶ For further information, please contact the local authorities or the dealer from whom the product was purchased.
- ▶ The consumer/end-user is responsible for the deletion of personal data on the waste electrical/electronic equipment.

3. Disposal of batteries



- ▶ Dispose of batteries separately after use from the product in accordance with applicable regulations. They must not be disposed of in household waste. The return is free of charge for consumers/end users.
- ▶ Before disposal, discharge and remove the batteries.


4. Removing the battery




- ▶ **Caution:** Before removal discharge the battery. For this product a non-destructive removal of the battery by the end user is not possible. Due to the safety risk, this activity may only be carried out by professional staff. Please contact beyerdynamic or consult independent professional staff.

- ▶ Discharge battery before disposal.


- ▶ To make it easier to remove the battery, remove the ear pads on both sides by turning them anti-clockwise.

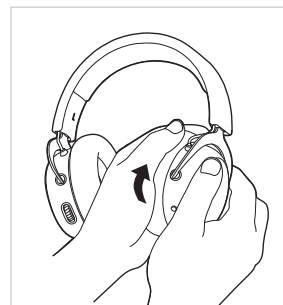


- ▶ Loosen the three screws of the baffle on the **right-hand** side of the headphones using a suitable screwdriver.

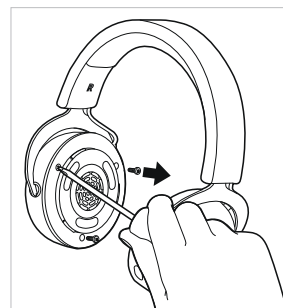


- ▶ **Carefully** remove the baffle. **Attention:** The cable of the circuit board is soldered to the baffle.

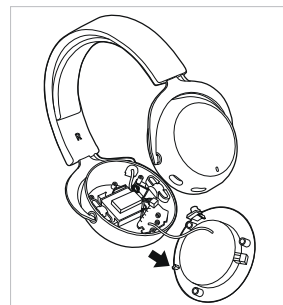

- ▶ Disconnect the plugs of the bundled red/white/black cables by hand.

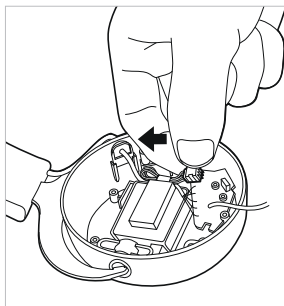

- ▶ Grab the strap under the battery with a small pair of needle-nosed pliers and turn it until you can pull out the adhesive pad under the battery. The battery comes off from the bottom and can be removed.

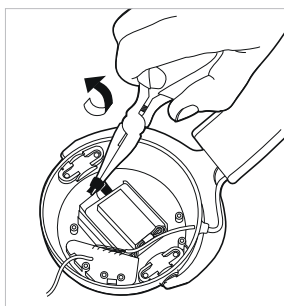

beyerdynamic GmbH & Co. KG
Theresienstraße 8 • 74072 Heilbronn / Germany
Phone +49 7131 617-300 • E-Mail info@beyerdynamic.de
www.beyerdynamic.com

For further distributors worldwide, please go to www.beyerdynamic.com
Non-contractual illustrations. Subject to change without notice.

EN 1 | MMX 200 wireless | (06.23)



CREATE THE AMAZING