

beyerdynamic

AVENTHO 300

WIRELESS OVER-EAR HEADPHONES

DISASSEMBLY INSTRUCTIONS TO REMOVE THE BATTERY

— **PROFESSIONAL STAFF ONLY** —

1. Introduction.....	3
2. Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU	3
3. Disposal of batteries	3
4. Removing the battery	3

1. Introduction

In accordance with the Electrical and Electronic Equipment Act (ElektroG) and the European WEEE Directive 2012/19/EU, electrical and electronic equipment must be disposed of separately from household waste at the end of their life.

If the device is operated with batteries, these must be removed before disposal. If batteries are permanently installed in the device, they must be removed by professional staff for safety reasons.

These disassembly instructions show how to proceed.

2. Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU



- ▶ The symbol of the crossed-out dustbin on the product, in the operating instructions or on the packaging means that electrical and electronic devices must be disposed of separately from household waste at the end of their life cycle.
- ▶ Always dispose of used equipment in accordance with applicable regulations.
- ▶ For the return of old equipment, batteries and rechargeable batteries, there are free collection points or a free return to beyerdynamic, as well as other acceptance points for reuse. The addresses are available at the local city or municipal administration.
- ▶ Dealers for electronic equipment are generally obliged to take back waste electrical/electronic equipment free of charge. This obligation also applies to sales via remote communication.
- ▶ For further information, please contact the local authorities or the dealer from whom the product was purchased.
- ▶ The consumer/end-user is responsible for the deletion of personal data on the waste electrical/electronic equipment.

3. Disposal of batteries



- ▶ Dispose of batteries separately after use from the product in accordance with applicable regulations. They must not be disposed of in household waste. The return is free of charge for consumers/end users.
- ▶ Before disposal, discharge and remove the batteries.

4. Removing the battery




- ▶ **Caution:**
Before removal discharge the battery. For this product a non-destructive removal of the battery by the end user is not possible. Due to the safety risk, this activity may only be carried out by professional staff. Please contact beyerdynamic or consult independent professional staff.


- ▶ Discharge the battery before disposing of it.
- ▶ Remove the ear pad from the **left (L)** housing by grabbing it at the lower end from the inside under the ear pad and pulling it downwards from the fastening ring of the housing.



- ▶ Loosen the five screws of the acoustic baffle on the **left** housing with a suitable screwdriver.

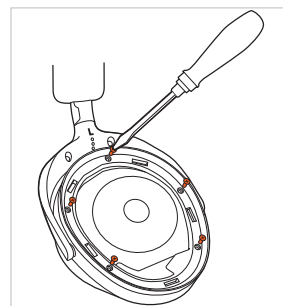

- ▶ Grab into the gap between the acoustic baffle and housing at the top and **carefully** fold the acoustic baffle downwards.
Caution: The cable of the circuit board is soldered to the acoustic baffle.
- ▶ Remove the cover from the battery housing.

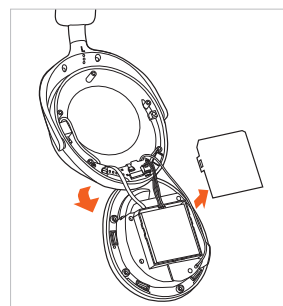



- ▶ Disconnect plug of the red/white/black cables by hand in the direction of the arrow and remove the battery.

Caution:

The battery is attached to the housing with a double-sided adhesive tape to prevent vibrations. Some effort is therefore required to remove the battery.

If necessary, you can use a soft, blunt tool, e.g. a plastic spatula or the cover of the battery housing.

Make sure that the battery is not damaged when you remove it.

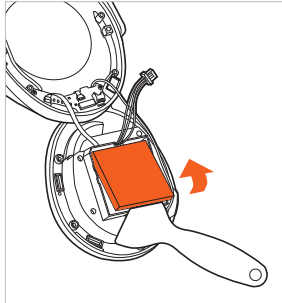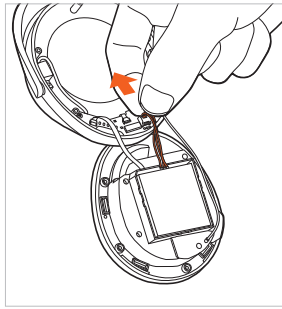

beyerdynamic GmbH & Co. KG
Theresienstraße 8 · 74072 Heilbronn / Germany
Phone +49 7131 617-300 · E-Mail info@beyerdynamic.com
www.beyerdynamic.com

For further distributors worldwide, please go to www.beyerdynamic.com
Non-contractual illustrations. Subject to change without notice.