



beyerdynamic

MMX 150 WIRELESS

DONGLE UPDATE PROGRAM

User Manual




INSTALLATION


- ▶ Download **DongleUpdateRTK_V1.0.0.0.zip** from the beyerdynamic homepage
- ▶ Extract DongleUpdateRTK_V1.0.0.0.zip. The files will be automatically extracted to the subfolder \DongleUpdate
- ▶ Change to the extracted subfolder **\DongleUpdate**
- ▶ Start **DongleUpdateRTK.exe**
- ▶ Use the “...” button in the program to select the dongle update firmware file **MMX150WL_Dongle_V1.5.9.bpa** (the default folder for firmware updates is \Firmware)
- ▶ Press the button **“Update Firmware”** to start the update of the dongle

Screenshots



- ▶ Extract DongleUpdateRTK_V1.0.0.0.zip. The files will be automatically extracted to the subfolder **\DongleUpdate**

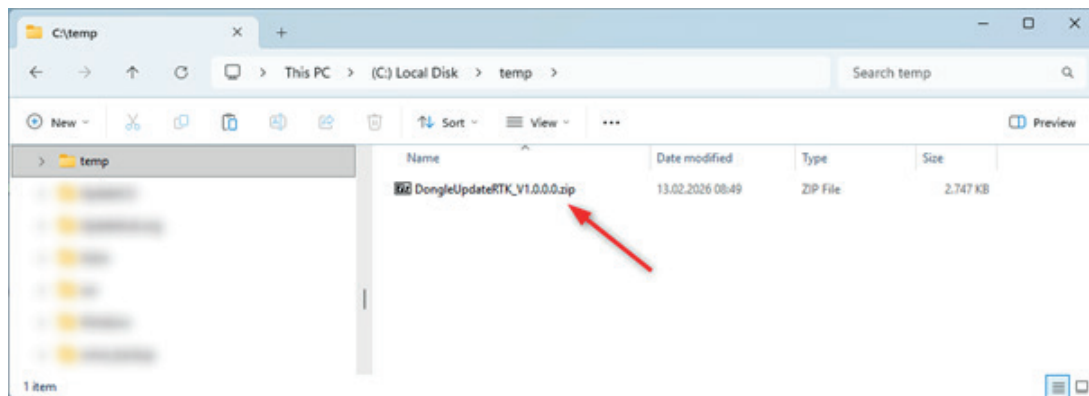



Subfolder \DongleUpdate

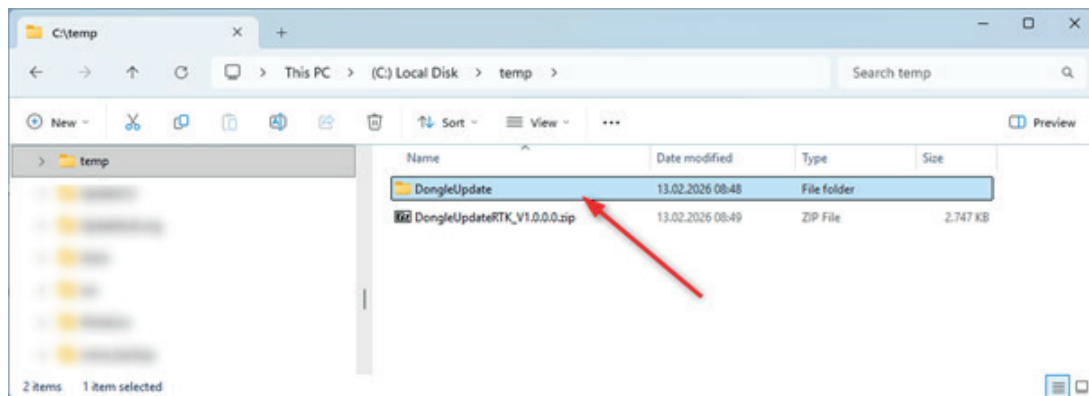




- ▶ Change to the extracted subfolder \DongleUpdate
- ▶ Start **DongleUpdateRTK.exe**

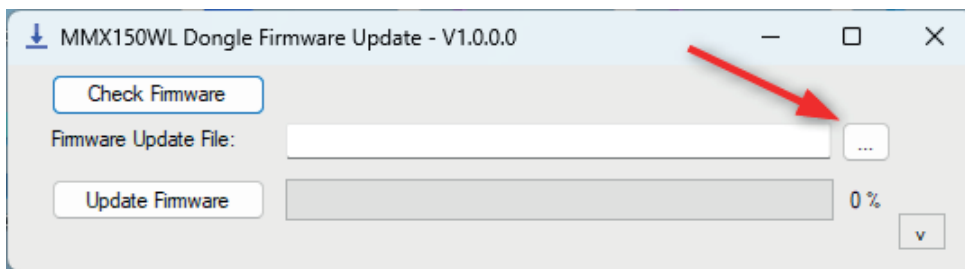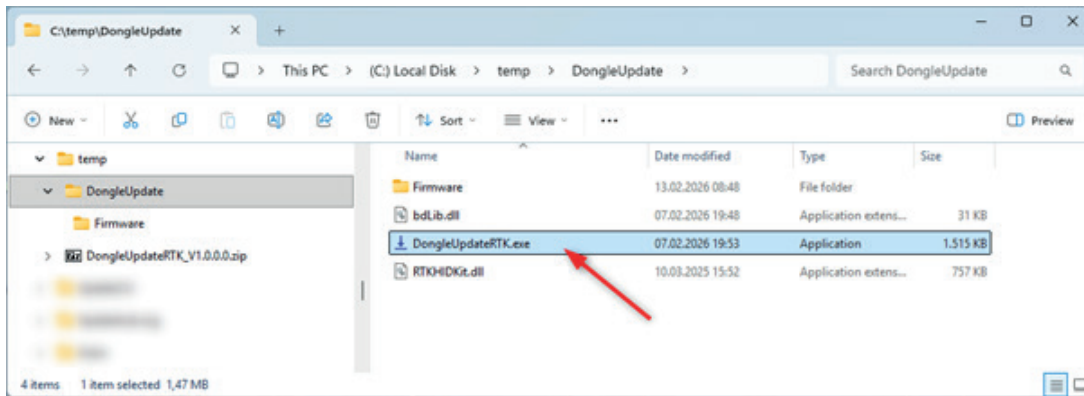


- ▶ Use the “...” button in the program to select the dongle update firmware file **MMX150WL_Dongle_V1.5.9.bpa** (the default folder for firmware updates is \Firmware)

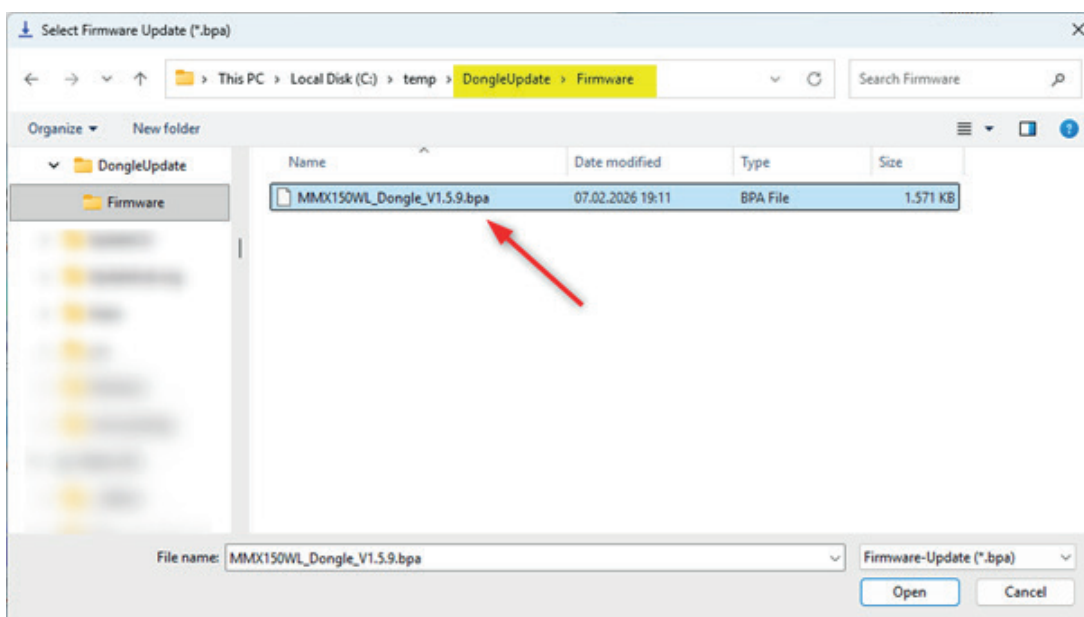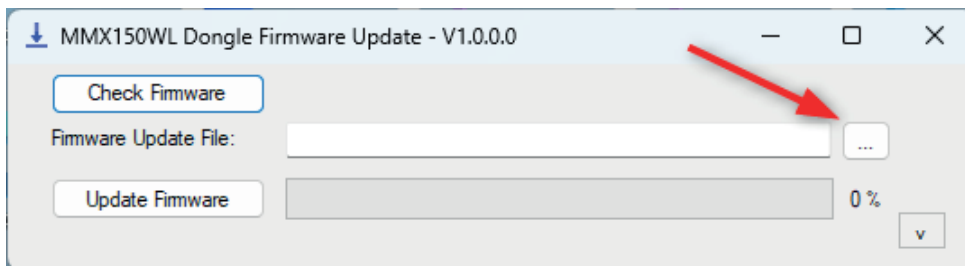


- Press the button **“Update Firmware”** to start the update of the dongle

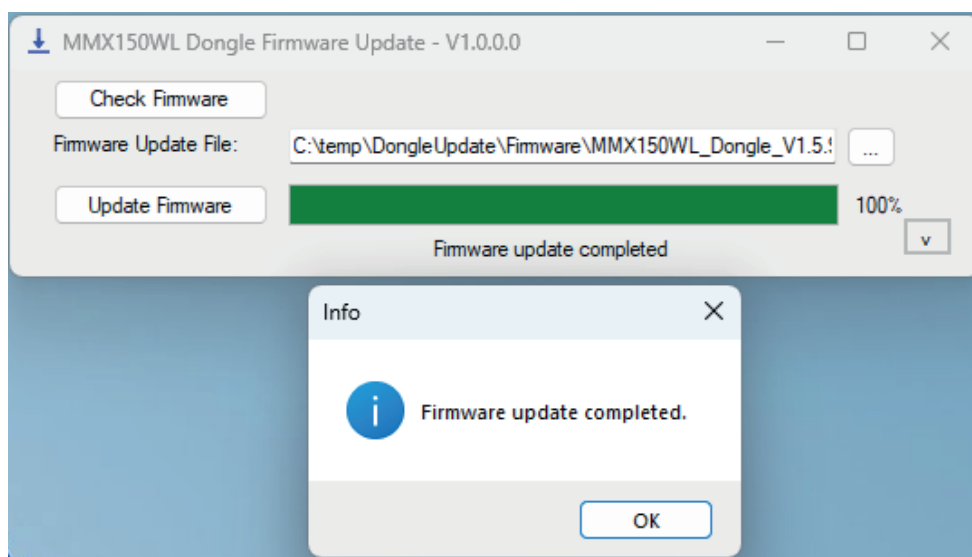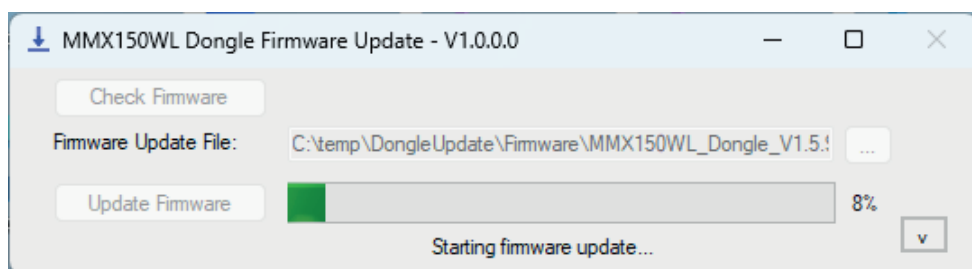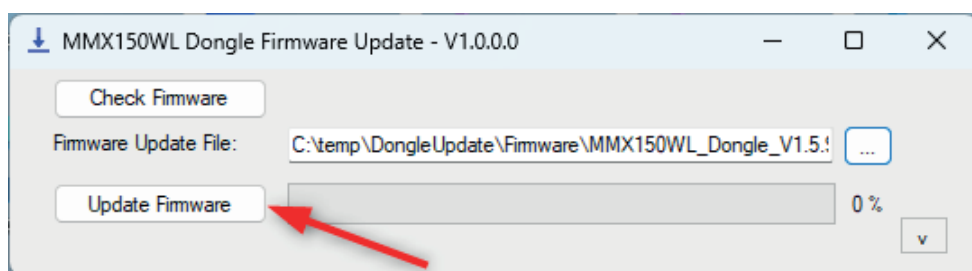

- The firmware version of the dongle can be checked using the **“Check Firmware”** button:

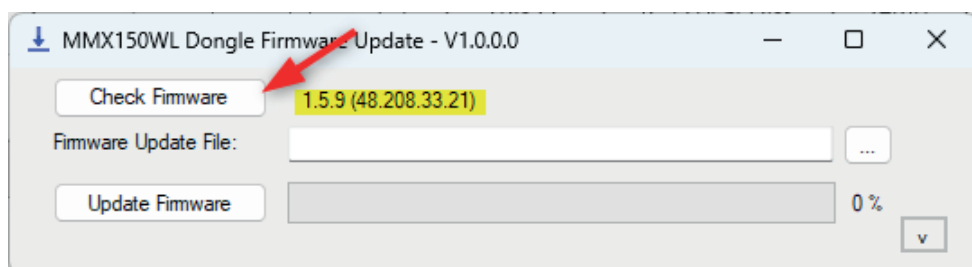

The Arrow down/up symbol can be used to expand or compress a textbox with the messages of the program:

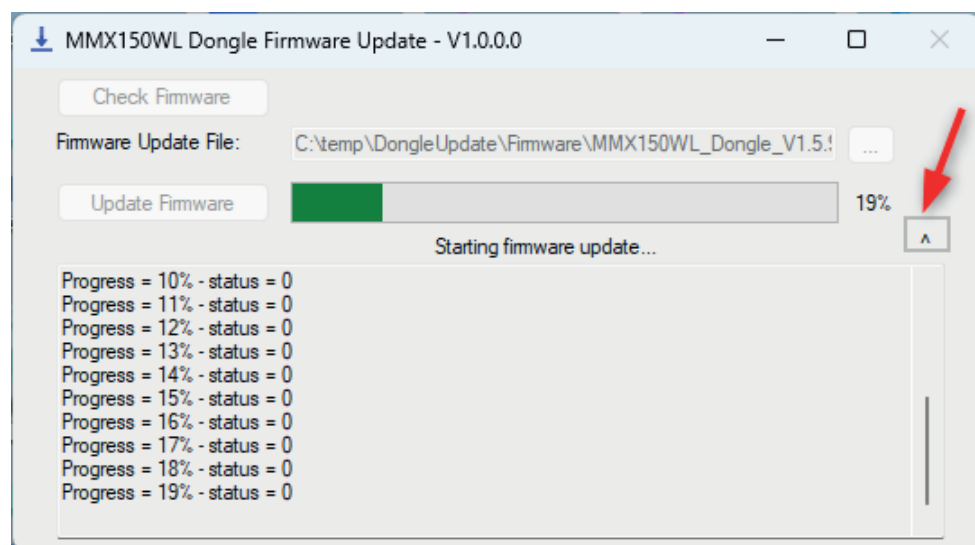

beyerdynamic GmbH & Co. KG
Theresienstraße 8 • 74072 Heilbronn / Germany
Phone +49 7131 617-300 • E-Mail info@beyerdynamic.com
www.beyerdynamic.com

For further distributors worldwide, please go to www.beyerdynamic.com
Non-contractual illustrations. Subject to change without notice.

EN-1 | MMX 150 wireless Dongle Update Program | (03.26)